

AES RAPTOR R1000

MOBILE FALL PROTECTION SYSTEMS



**AES
RAPTOR®**

COMPLETE MOBILE
FALL PROTECTION SYSTEMS

TWO FOR FALL ARREST UPGRADE INSTALLATION INSTRUCTIONS

TO PERFORM THIS UPGRADE, YOU WILL NEED A
1 1/16" WRENCH OR 1 1/16" SOCKET.



1) VERIFY YOU HAVE ALL THE PARTS SHOWN BELOW.



2) REMOVE THE EXISTING CARABINER



LOCKING CARABINERS
NEED TO BE TWISTED
BEFORE RELEASING.

IF YOU HAVE QUESTIONS OR NEED ANY ADDITIONAL HELP OR INFORMATION,
PLEASE CALL US OR EMAIL: DAVIDJOHN@RAPTORSAFETY.COM

888-990-2990 ♦ www.RAPTORSAFETY.COM

AES RAPTOR R1000

MOBILE FALL PROTECTION SYSTEMS



TWO FOR FALL ARREST UPGRADE INSTALLATION INSTRUCTIONS (P. 2)



3) SLIP THE CABLE END OVER ONE OF THE BOLT ENDS. ENSURE THE BOLT SLEEVE IS OVER THE BOLT.




4) PLACE THE OTHER BOLT END THROUGH THE EYE-BOLT ON THE BOTTOM OF THE ENGAGEMENT ARM. ENSURE THE BOLT SLEEVE IS OVER THE BOLT.



5) SLIP THE SECOND PLATE OVER THE BOLT ENDS.

6) TIGHTEN NUTS UNTIL BOT END IS FLUSH WITH NUT END.
(IT IS IMPOSSIBLE TO PROVIDE A TORQUE RATING DUE TO THE POWDER COATING ON THE BOLT THREADS.)

IMPORTANT: CHECK/VERIFY ENGAGEMENT ARM HAS FREEDOM OF MOVEMENT BY DEPRESSING ENGAGEMENT ARM DOWN AND OBSERVING OPERATION OF SYSTEM.

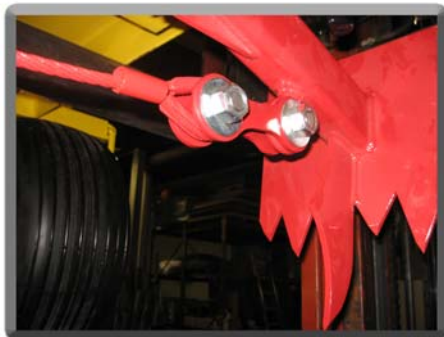

THESE PHOTO SHOWS HOW THE "DOGBONE" ATTACHES TO THE RAPTOR R1000'S ENGAGEMENT "CLAW".

IF YOU HAVE QUESTIONS OR NEED ANY ADDITIONAL HELP OR INFORMATION,
PLEASE CALL US OR EMAIL: DAVIDJOHN@RAPTORSAFETY.COM

888-990-2990 ♦ WWW.RAPTORSAFETY.COM